## AIR SWITCH FOR FOOD WASTE DISPOSER INSTALLATION INSTRUCTIONS

The air switch is supplied in six parts:

- 1. Bellow
- 4. Push button 5. Switch Box
- 2. Socket 5. Switch
- 3. Soft Tube 6. Plug with card

To install the air switch, first drill a 16mm hole into your work surface or sink at the most convenient place for use. To fit the bellow, undo the back nut and washer. Fit the bellows through the hole you have drilled. Fit the washer and back nut to the bellow and hand tighten only.

Take the rubber tube and push into the spigot at the bellows.


Take the other end and push into the switch box.

Insert plug from food waste disposer into switch box.

Insert air switch plug into a convenient 13Amp main socket.

## IMPORTANT

Disconnect main supply before entering switch housing.

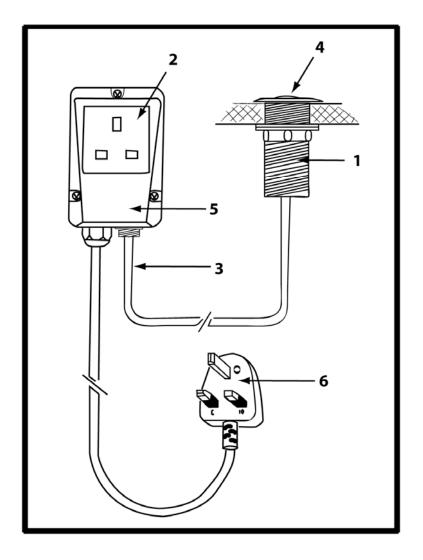

© ANAHEIM UK LIMITED