



Instruction manual for island hood

Model code: VIE551BK - VIE551SS



Contact Caple on 0117 938 7420 or for spare parts www.caple.co.uk

GB



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. This appliance is marked according to the European directive 2002/96/EC on waste electrical and electronic equipment (WEEE).

CONTENTS

Warnings

Controls

Installation


Working


Maintenance

WARNINGS

* The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.

* The cooker surface and the inferior part of the cooker hood must be at a minimum distance of 65 cm.

If the rating label in the cooker-hood shows the symbol  , the appliance is built in class II° and it does not need any earth connection.

If the rating label in the cooker-hood does not show the symbol  , the appliance is built in class I° and it needs the earth connection.

* When performing the electrical connections on the appliance, please make sure that the current-tap is provided with earth connection and that voltage values correspond to those indicated on the label placed inside the appliance itself.

* Before carrying out any cleaning or maintaining operations, the appliance needs to be removed from the electric grid. If the appliance is not provided with a non-separable flexible cable and plug, or with another device ensuring omnipolar disconnections from the grid, with an opening distance between the contacts of at least 3 mm, then such disconnecting devices must be supplied within the fixed installation.

If the fixed appliance is endowed with a supply cord and a plug, the appliance has to be put in a place where the plug can be reached easily.

* The use of materials which can burst into flames should be avoided in close proximity of the appliance. When frying, please pay particular attention to fire risk due to oil grease. Being highly inflammable, fried oil is especially dangerous. Do not use uncovered electric grills.

In order to avoid possible fire risk, all instructions for grease-filter cleaning and for removing eventual grease deposits should be strictly followed.

USES

The appliance can only be used in the filtering version, so it is equipped with metal grease filters and activated charcoal filters.

INSTALLATION

Make sure that the packaging is in perfect conditions and that none of the components inside is damaged : in case of damaged components, please contact your retailer and do not carry out installation. Read all of the following instructions before carrying out installation.

VIE551BK Installation

Place the fixing plate (Fig.1) into the ceiling, in a position which coincides with the centre of your cook-top, then drill the holes and fix the plate by using the screws and screw anchors supplied with the appliance. The power cord needs to pass through the plate hole, which is shown by the arrow in Fig.1.

Remove the appliance from its packaging and place it in a suitable area, where it is not likely to be damaged.

Fix the articulated rod to the product by inserting and tightening the fixing screw, as shown in Fig. 2.

Adjust the height of the appliance , making sure a minimum distance of at least 65 cm is maintained between the lowest part of the hood and the cook-top; height adjustment can be done by loosening the rod fixing screws , adjusting the appliance height and then by fastening them again.

Insert the fixing plate cover from the rod upper part, as per Fig. 3.

Hang the appliance to the fixing plate, and secure the plate by using the two screws supplied with the appliance, as shown in Fig. 4.

Make the electric connection.

Lift the fixing plate cover and secure it with the screws supplied with the appliance, as shown in Fig. 5.

RC001

RADIO CONTROL

 

 


Radio control used for the remote operation of cooker hoods

TECHNICAL DATA

- Alkaline battery powered: 12 V mod. 23 A
- Operating frequency: 433.92 Mhz
- Combinations: 32.768
- Max. consumption: 25 mA
- Operating temperature: $-20 \div + 55$ °C
- Dimensions: 120 x 45 x 15 mm.

OPERATING DESCRIPTION

The transmitter is equipped with 5 buttons for cooker hood management, as specified below:

-  : Light ON/OFF command.
-  : Motor ON (speed level 1) / OFF command.
-  : Reduce speed.
-  : Increase speed.
-  : 10-minute timer.

INITIAL OPERATING CONDITION

The manufacturer supplies the radio control unit ready to be used with codes preset in the Factory



OPERATION MODE

Standard configuration:

 
Standard configuration requires all "cooker hoods - radio control - system" to be provided with the same transmission code. In the event two cooker hoods - radio control system are installed in the same room or nearby, each system may affect the operation of the another. Therefore, the code of one radio control system must be changed.

Generatiing a new transmiissiion code:

The radio control system is provided with preset codes. Should new codes be required, proceed as follows: Press simultaneously buttons:



for two seconds. When Leds light on, press buttons:




(within 5 seconds). Leds flashing 3 times indicate

the procedure is completed.

WARNING! This operation deletes permanently the preset codes.

Learniing the new transmiissiion code:

 Once the transmission code is changed in the radio control unit, the electronic central unit of the cooker hood must be made to set the new code in the fol- lowing way:


Press the main power-off button of the hood and then restore power to the electronic control unit. Within the next 15 seconds, press the Liight Button  to synchronise the central unit with the code.

Reset of the Factory configuratiion:

To restore the Factory configuration, follow the pro- cedure described below: press simultaneously buttons:



 for 2 seconds. When Leds light on, press buttons:



(within 5 seconds). Leds flashing 6 times indicate the procedure is completed.

WARNING! This operation deletes permanently the preset codes.

Emergency button:

In the event that the radio control does not work, use the emergency button to switch the appliance off. After any necessary repairs have been performed, reset the emergency button.

WARNING

The battery should be replaced every year to guarantee the optimal range of the transmitter.

To replace the exhausted battery, take the plastic lid off, remove the battery and replace it with a new one, observing the correct battery polarities.

Used batteries should be discarded in special collection bins.

The below product:

RC001 Radiio Controll

complies with the specifications set out in the R&TTE Directive 99/5/EC.



WARNING

Any adjustments or modifications which have not been expressly approved by the holder of the legal conformity certificate may invalidate the user's rights relating to the operation of the device.

Rev. 0 26/08/14

The products are endowed with an electronic device which allows the automatic switching off after 4 hours working from the last operation.

ENERGY USE

The energy consumption of this appliance in standby mode is lower than 0.5W.

MAINTENANCE

An accurate maintenance guarantees good functioning and long-lasting performance.

A special care is due to the grease filter.

VIE551BK grease filters replacement

Remove the lower cylindrical plate as shown in Fig. 7, by pulling it downwards since it is magnetically hold.

Remove the grease filters by acting on their handle.

After 30 hours of operation of the cooker-hood, the remote control will signal the filter saturation by the simultaneous lighting of led indicators; to reset, select the timer function when the cooker-hood is off ⊕.

The metal grease filter can be washed by hand or in the dishwasher.

The grease filter needs regular cleaning depending on its use, once every two months at least.

The charcoal filter needs to be replaced depending on its use, once every six months at least.


We recommend to use tepid water and a neutral detergent to clean the appliance, while abrasive products should be avoided .

The power cord replacement must be carried out by specialized personnel only.

LED VIE551BK lamps replacement:

Remove the cooker-hood upper cover by removing the 4 fixing screws , find the damaged LED lamp and replace it with a new one with the same characteristics.

Refit the upper cover.

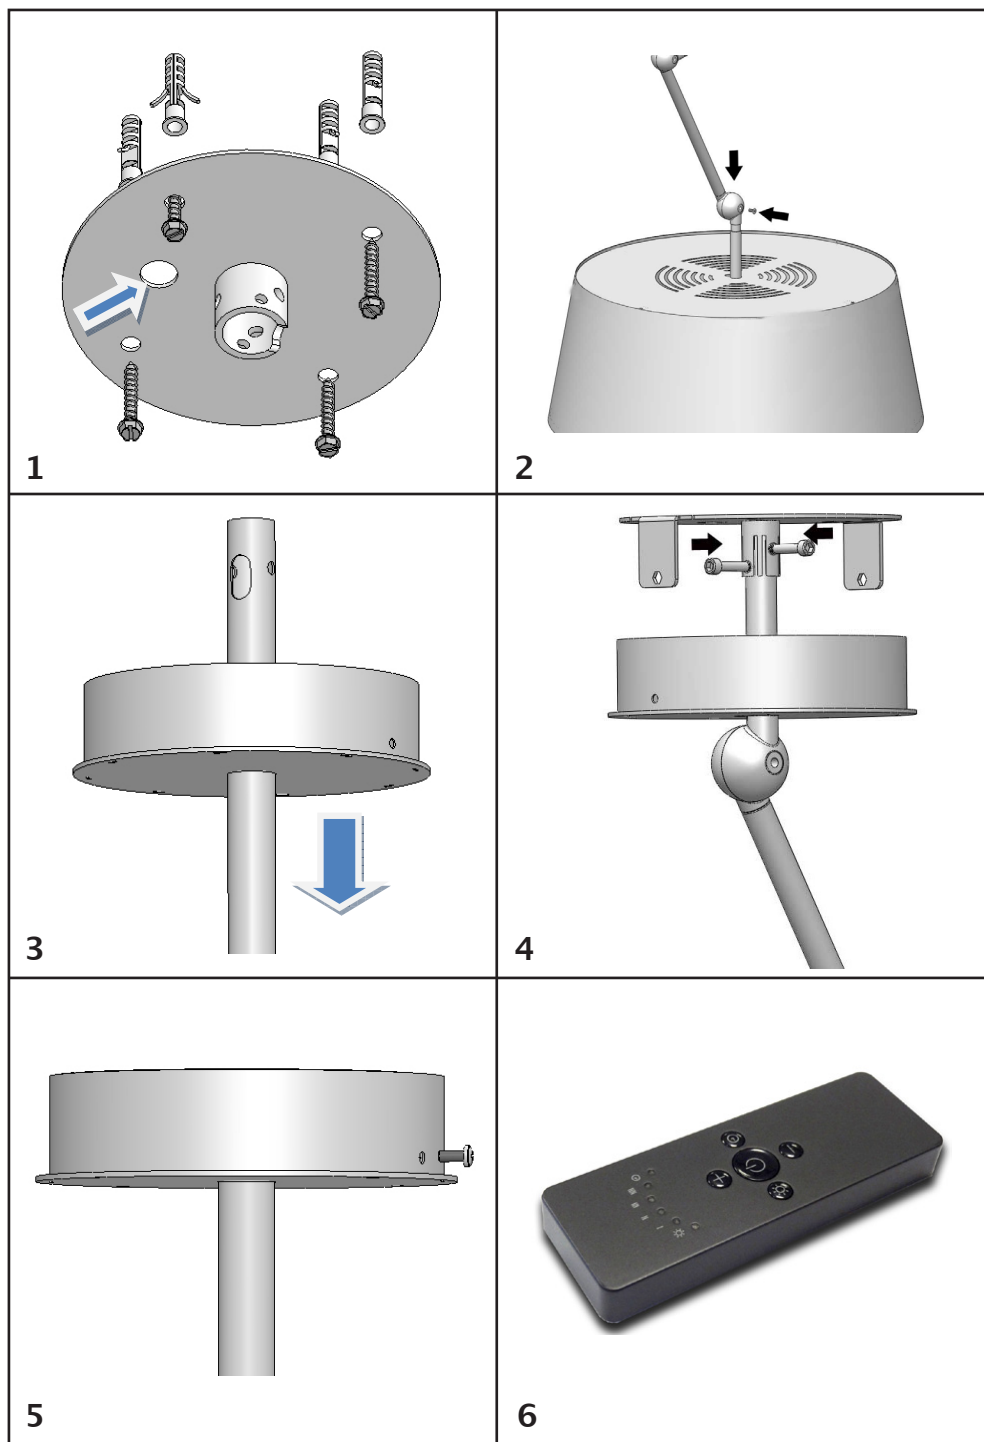



7

Caple
Fourth Way
Avonmouth
Bristol
BS11 8DW
www.caple.co.uk