PROBOIL.2

Professional

Installation Guide


These instructions should be used in conjunction with the principal instruction booklet supplied, you should substitute the section referring to 'Important technical data' on page 16 of the User & Installation Guide.

Important Technical Data

Minimum operating pressure (cold): 1.5 bar (with filter), 1.0 bar (without filter)	Maximum operating pressure: 5.5 bar*
Minimum operating pressure (hot): 1.2 bar	
Flow characteristics: Dual flow: Hot & Cold through shared path to hand spray, boiled water only separate too hot water exit	

*If these pressures are exceeded, even for short periods, damage can result. In these instances a pressure reducing valve should be installed.

Using the Product:

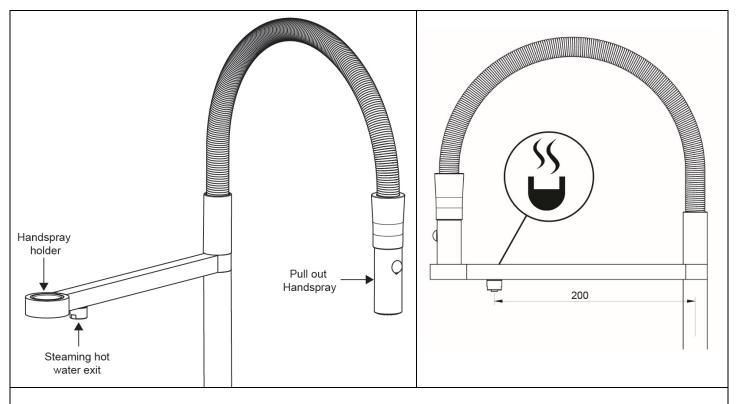

Please refer to page 5 in the User & Installation Guide referring to how to dispense the hot, cold and steaming water.

Due to the unique positioning of the boiled water exit, extra care must be taken to keep your hands clear of the boiled water.

Hot & Cold (domestic) water spray feature:

The Pronteau Professional 3 in 1 tap has an added spray feature which can switched on and off using the button on the hand spray. The hand spray can also be pulled out of its holder and be rotated 360 degrees.

Hot (boiled & filtered) water:

The exit of the hot boiled filtered water exits from the extension bar which has a reach of 200mm from the centre of the tap.

Note: Both the hot boiled filtered water and the spray can be operated at the same time due to them having separate channels