



# Classic single oven Instruction manual

## C2220



Contact Caple on 0117 938 7420 or for spare parts [www.caple.co.uk](http://www.caple.co.uk)





# CONTENTS

|   |    |
|---|----|
| Safety Warnings                         | 3  |
| Installation warnings                   | 7  |
| Environmental protection                | 10 |
| Warranty                                | 10 |
| Installation                            | 12 |
| Oven dimensions                         | 13 |
| Electrical connection                   | 14 |
| Using your oven                         | 15 |
| Cooking guidelines                      | 15 |
| Oven functions                          | 16 |
| Touch control electronic timer          | 17 |
| Telescopic runners (optional accessory) | 20 |
| Side racks                              | 20 |
| Care and maintenance                    | 21 |
| Replacing the oven lamps                | 22 |
| Troubleshooting                         | 23 |
| Removing and reversing the oven door    | 24 |
| Technical fiche                         | 26 |
| Caple contact details                   | 28 |

Please keep this instruction manual for future reference





## SAFETY INSTRUCTIONS

Read these instructions carefully and completely before using your appliance, keep it in a convenient place for reference when necessary.

- This appliance can be used by children aged from 8 years and above.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must be supervised and given appropriate instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance should not be carried out by children without supervision.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.

Please keep this instruction manual for future reference

Instruction manual C2220 3



## WARNING:

- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Children less than 8 years of age should be kept away unless continuously supervised.
- To prevent fire hazards do not store items on the cooking surfaces.
- During use, handles can get hot.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass or any other surface of the appliance as it can scratch the surface which may result in the glass shattering or permanent damage to the surface.
- Do not use steam cleaners for cleaning the appliance.
- Ensure the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

Please keep this instruction manual for future reference



## CAUTION:

- Accessible parts may be hot when the cooking or grilling is in use. Young children should be kept away.
- Your appliance is produced in accordance with all applicable local and international standards and regulations.
- Maintenance and repair work must be made only by authorised Caple service technicians. Installation and repair work that is carried out by unauthorised technicians may endanger you.
- It is dangerous to alter or modify the specifications of the appliance in any way.
- Prior to installation, ensure that the local distribution conditions (electricity voltage and frequency) and the requirements of the appliance are compatible. The requirements for this appliance are stated on the rating label.
- This appliance is designed only for cooking food and is intended for indoor use.

Please keep this instruction manual for future reference

Instruction manual C2220 5



- This product is not designed for commercial use, it is a household appliance only. It is not intended to be used in:
  - Staff kitchen areas in shops, offices and other working environments.
  - Bed and breakfast type environments.
  - By clients in hotels, motels and other residential type environments.
- Do not try to lift or move the appliance by pulling the door handle.
- All possible security measures have been taken to ensure your safety. Since the glass may break, you should be careful while cleaning to avoid scratching.
- Avoid hitting or knocking on the glass with accessories.
- Ensure that the supply cord is not wedged or trapped during the installation. If the supply cord is damaged, it must be replaced by a Caple service technician or similarly qualified persons in order to prevent a hazard.
- While the oven door is open, do not let children climb on the door or sit on it.

Please keep this instruction manual for future reference



## INSTALLATION WARNINGS

- Do not operate the appliance before it is fully installed.
- The appliance must be installed by an authorised technician.
- Caple is not responsible for any damage that may be caused by defective placement and installation by unauthorised persons.
- When unpacking the appliance, make sure that it is not damaged during transportation. In the case of any defect; do not use the appliance and contact your retailer or Caple Service immediately.
- Materials used for packaging (nylon, staplers, styrofoam etc) may cause harmful effects to children they should be disposed of immediately.
- Protect your appliance against atmospheric effects. Do not expose it to effects such as sun, rain, snow etc.
- The surrounding materials of the appliance (i.e. kitchen cabinet or furniture) must be able to withstand a minimum temperature of 120°C.

Please keep this instruction manual for future reference

Instruction manual C2220 7



## DURING USAGE

- Before using the oven for the first time, heat the empty oven at max. temperature for 1 hour – removing any unpleasant smells and smoke caused by working residues and thermal insulation. Make sure you do this in a well ventilated area.
- During usage, the outer and inner surfaces of the oven get hot. While opening the oven door, step back to avoid the hot steam coming out of the oven as there may be a risk of burns.
- Do not put flammable or combustible materials in or near the appliance when it is operating.
- Always use oven gloves to remove and replace food in the oven.
- Pay close attention to the oven while cooking with solid or liquid oils as they could potentially catch fire when oven is hot.
- Never pour water on flames that are caused by oil. Cover the saucepan or frying pan with its lid in order to choke the flame and turn the oven off.
- If you know you will not be using the appliance for a while switch it off from the mains supply.
- The oven shelves and trays incline when pulled out. Be careful not to let hot liquid spill over.

Please keep this instruction manual for future reference







- When the door of the oven is open, do not leave anything on it. It may unbalance your appliance or damage the door.
- Do not put anything heavy, flammable or ignitable (nylon, plastic bag, paper or cloth etc) into the oven. This includes cookware with plastic accessories (e.g. handles). Do not hang towels, dishcloths or clothes from the appliance or its handles.
- Do not use the oven for storage purposes.
- Do not touch the appliance with wet hands.
- Do not obstruct the ventilation openings.
- Do not allow supply cords from other small appliances to come into contact with the oven.

## **DURING CLEANING AND MAINTENANCE**

- Always switch off the appliance from the mains isolating the electrical supply before any cleaning or maintenance.
- To maintain the efficiency and safety of your appliance, we recommend you always use original spare parts and to call only our authorised Caple Service agents in case of need.

Please keep this instruction manual for future reference

Instruction manual C2220 9



## ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This appliance is marked according to the European directive on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local council, your household waste disposal service or the retailer where you purchased the product.

## WARRANTY

Your new appliance is covered by warranty. The warranty card is enclosed - if it is missing, you must provide the following information to your retailer in order to receive a replacement: date of purchase, model and serial number. Registration can also be completed online by visiting [www.caple.co.uk](http://www.caple.co.uk).

Ensure you keep your warranty card safe, you may need to show it to Caple Service together with proof of purchase.

If you fail to show your warranty card you will incur all repair charges.

Spare parts are only available from Caple Service and spare parts authorised centres.

Please keep this instruction manual for future reference





## CE DECLARATIONS OF CONFORMITY **CE**

This appliance has been designed, constructed and marketed in compliance with safety requirements in force. This appliance has been manufactured to the strictest standards and complies with all applicable legislation.

Please keep this instruction manual for future reference

Instruction manual C2220 11





## INSTALLATION

### IMPORTANT:

 
### ISOLATE YOUR OVEN FROM THE ELECTRICAL SUPPLY BEFORE PERFORMING INSTALLATION OR MAINTENANCE.

Installation should be carried out according to the instructions by a professionally qualified person only.

The manufacturer declines all responsibility for any damage to persons, animals or materials due to incorrect installation.



## FITTING THE APPLIANCE

Fit the appliance into its surround (beneath a worktop or above another appliance in a tall housing) by inserting screws and plastic covers into the 2 holes (A - fig.3) that can be seen in the frame of the oven when the door is open.


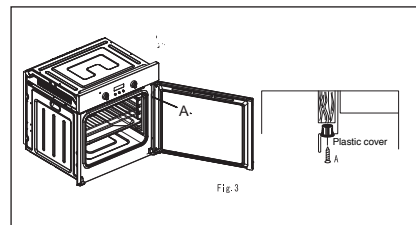


For the most efficient air circulation, the oven should be fitted according to the dimensions shown in fig. 1 & 2.

  The rear panel of the cabinet must be removed so that air can circulate freely. The panel to which the oven is fitted should have a gap of at least 70 mm at the rear for ventilation (fig.4 & fig.5).

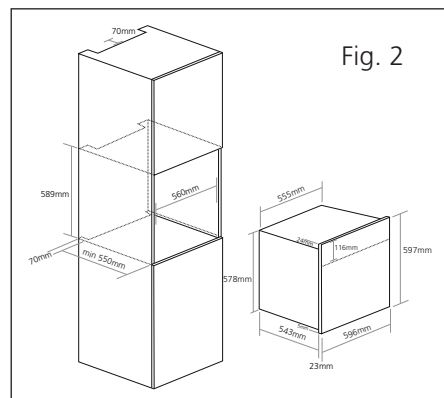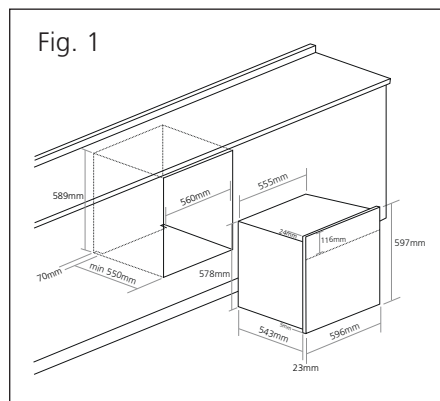

  Please keep this instruction manual for future reference

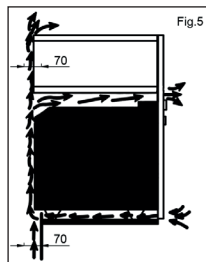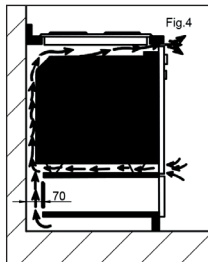

See below for full dimensional drawings of your oven to help with installation.


For a built-in oven to work well the cabinet must be of the right type.

The panels of the adjoining furniture should be heat resistant. Particularly when the adjoining furniture is made of veneered wood, the adhesives should be able to withstand a temperature of 120°C. Plastic materials or adhesive which cannot withstand this temperature may become deformed or unstuck.

To comply with safety regulations, once the appliance has been fitted it should not be possible to make contact with the electrical parts.

All parts which offer protection should be fixed in such a way that they cannot be removed without the use of a tool.

## OVEN DIMENSIONS

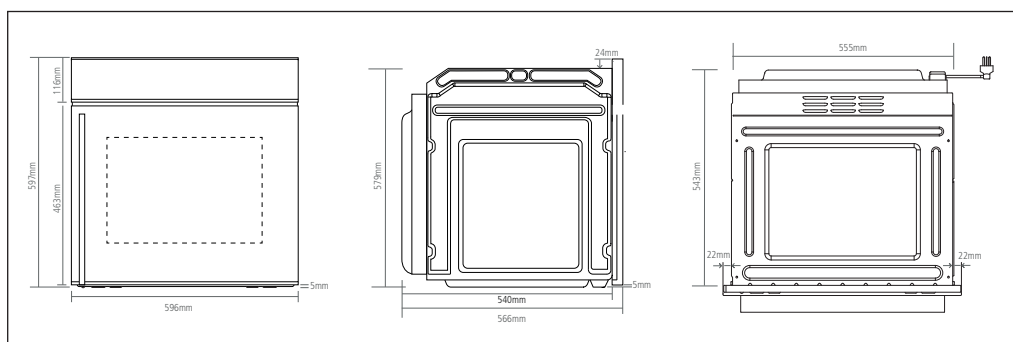 

Please keep this instruction manual for future reference





## ELECTRICAL CONNECTION

### **WARNING: THIS APPLIANCE MUST BE EARTHED**

Check that the power rating of the mains supply is suitable for the maximum power of the appliance as indicated on the rating label.

The fuse rating for this appliance is 13amp.

The appliance is supplied with a mains lead it should be "Hard wired" as follows:

The "yellow/green" earth wire, which must be connected to a terminal, and has to be about 10mm longer than the other wire.

The neutral wire has to be connected to the terminal marked with a letter N.

The Live wire should only be connected to the terminal marked L.

Mains connection can also be made by fitting a double pole switch with a minimum gap between the contacts of 3mm, proportionate to the load and complying with the regulations in force.

### **The yellow/green earth wire should not be controlled by the switch.**

When a double pole switch is used for mains supply connection it should be easily accessed, once the appliance is in position.

### **IMPORTANT:**

The mains supply cable should be positioned so that it is never subjected to temperatures which are more than 50°C above ambient temperature.

The electrical safety of the appliance can only be guaranteed when it has been correctly connected to a properly earthed mains electrical supply, as laid down in the current regulations for electrical safety.

The manufacturer cannot be held responsible for any damage to persons or objects due to lack of an earth connection.

The ovens are designed to operate with a mono-phase alternating current of 220-240V, 50Hz.

**Before the installation of the appliance, check the specifications on the rating label.**

 
Please keep this instruction manual for future reference





## USING YOUR OVEN

### CONTROL PANEL

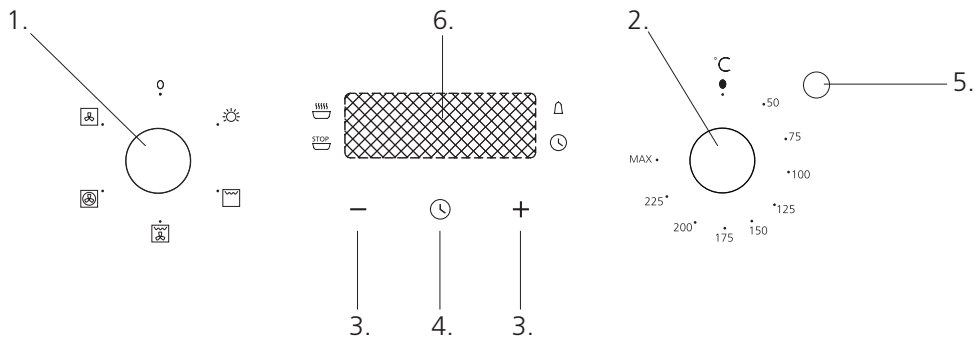

1. Function control knob
2. Temperature control knob
3. Plus/Minus (+/-) touch control buttons
4. Timer touch control button
5. Temperature indicator
6. Display screen

### COOKING GUIDELINES

- Set the function for the type of cooking required.
- Preheat the oven, setting the thermostat to the required temperature. Once the oven has heated to the selected temperature, the orange temperature indicator light will go out. You can now insert the food.
- This same light will appear again automatically during operation of the oven to indicate that the heating elements are on.

**Note:** Remove the drip tray when using the oven for fan cooking, roasting etc. The tray should be left in place only when using the grill, as its purpose is to catch falling droplets of fat. Food should be placed in oven dishes with raised edges and positioned centrally under the grill.

Please keep this instruction manual for future reference

Instruction manual C2220 15



## OVEN FUNCTIONS

### **LIGHT**

Internal oven light

### **TURBO DEFROST**

The air at ambient temperature is distributed inside the oven to speed up defrosting time.

### **FAN HEAT**

Both the fan and the circular heating element operate together. The fan evenly distributes the hot air (between 50°C and MAX) inside the oven. This is ideal for cooking several types of food i.e. meat and fish at the same time without affecting taste and smell. It is also ideal for delicate pastries.

### **GRILL**

This function can be used for grilling and gratinating food. When grilling, the oven door must be closed.

### **TURBO GRILL**

This function can be used for grilling and gratinating food quicker than other grill functions. When grilling, the oven door must be closed.

Please keep this instruction manual for future reference





## TOUCH CONTROL ELECTRONIC TIMER

### Note:

The oven only operates when the time has been set.

#### SETTING AND CHANGING THE TIME





When the appliance has been connected to the electrical supply or when there has been a power cut, the time indicator ⌚ flashes automatically.





To change the time that has already been set, press the time button ⌚ repeatedly, until the time indicator ⌚ flashes

Set the current time using the – or + button. After approx. 5 seconds, the flashing stops and the clock displays the time of day set.

The appliance is now ready to use

The time can only be changed if neither of the automatic functions (cook time  or end time ) have been set.



#### TIMER FUNCTIONS

|  |   |
|--|---|
| Countdown<br> | To set a countdown, a signal sounds after the time has elapsed.<br>This function does not affect the operation of the oven. |
| Cook time<br> | To set how long the oven is to be in use.   |
| End time<br>  | To set when the oven is to switch off again.  |
| Time<br>      | To set, change or check the time.   |




Please keep this instruction manual for future reference






## How to use the clock function

- When a function has been selected, the corresponding function indicator flashes for approx. 5 seconds. During this time the desired times can be set using + or – button.
- When the desired time has been set, the function indicator flashes for approx. another 5 seconds. After that the function indicator is then lit. The set time begins to run.
- Press any of the buttons to stop the acoustic signal.
- The desired oven function and temperature can be selected before or after the clock functions of cook time  and end time  are set.
- When the cooking time has ended, turn the oven function and temperature dial back to the OFF position.

## Countdown

- Press  button repeatedly, until the countdown indicator  flashes.
- Using the + or – button, set the required countdown (max. 2 hours 30 minutes).
- After approx. 5 seconds, the display shows the remaining time.
- The countdown indicator  will light up.
- When the time has elapsed, the function indicator flashes and an acoustic signal sounds for 2 minutes. Press any button to switch off the signal.




## Cook time

- Press selection button  repeatedly, until the cook time indicator  flashes.
- Using the + or – button, set the required cooking time.
- After approx. 5 seconds, the display returns to the current time. The cook time indicator  will light up.
- When the time has elapsed, the cook time indicator will flash, an acoustic signal will sound for 2 minutes and the oven will switch itself off. Press any button to switch the signal and the programme off.







Please keep this instruction manual for future reference



## End time

- Press selection button  repeatedly, until the end time indicator  flashes.
- Using the + or – button, set the required switch-off time.
- After approx. 5 seconds, the display returns to the current time.
- The end time indicator  will light up.
- When the time has lapsed, the function indicator will flash, an acoustic signal will sound for 2 minutes and the oven will switch itself off. Press any button to switch the signal and the programme off.

## Cook time and end time

- Cook time  and end time  can be used simultaneously, if you want the oven to be automatically switched on and off at a specific time.
- Using the cook time function  set the period of time that the dish requires to cook. For example, 1 hour.
- Using the end time function , set the time at which the dish is to be ready. In this example, 14:05.
- The cook time  and end time  light up and the time is shown in the display. In this example, 12:05.
- The oven will automatically switch itself on at the appropriate time as calculated. In this example, at 13:05 and will switch itself off when the cooking time set has elapsed. In this example, at 14:05.

Please keep this instruction manual for future reference



## Telescopic runners (optional accessory)

To assemble the telescopic runners:

- Remove the side racks (see section below and Fig.2)
- Choose which shelf to use with the telescopic runner. Pay attention to the direction in which the runner is to be extracted, position joint 'B' and joint 'C' on the frame (see Fig.1).
- Squeeze the bars together slightly and clip either end of the telescopic runners on to the side racks.
- Finally, re-fit the side racks (See below and Fig.2)

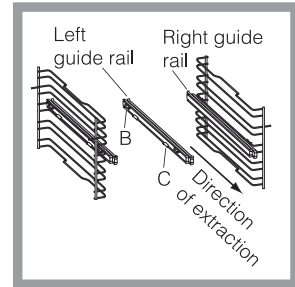 


Figure 1.

### Note:

Telescopic runners are optional accessories and are not included.

## Side Racks

To install, attach side rack by hanging these through the 2 holes in the side of the oven cavity, and pushing them onto the round steel clip towards the bottom.

To remove, unclip the side racks from the side of the oven.

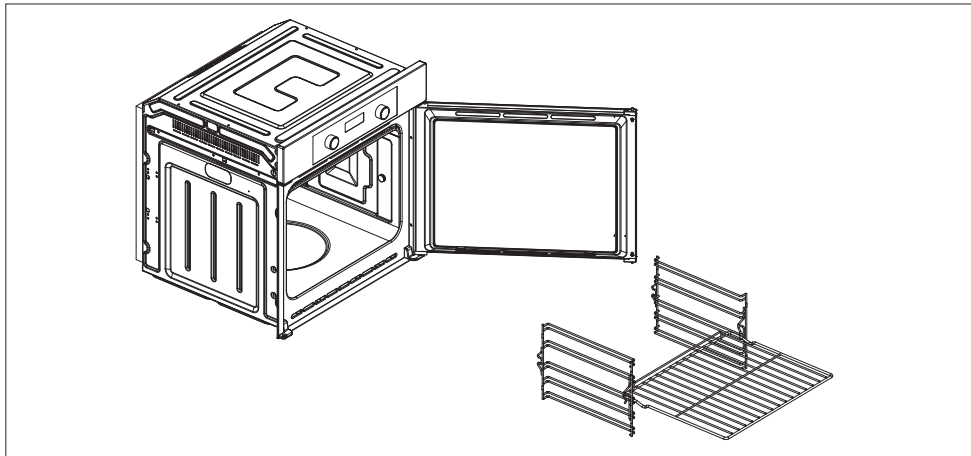 


Figure 2.

Please keep this instruction manual for future reference





## CARE AND MAINTENANCE

### IMPORTANT:

Unplug your oven before cleaning, or performing maintenance!

To extend the life of your oven, it must be cleaned frequently, keeping in mind that:

### DO NOT USES STEAM EQUIPMENT TO CLEAN THE APPLIANCE

- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid or sprinkle water to clean the appliance!
- Don't clean the appliance when it still hot! The inside and external surface of the oven should preferably be cleaned by damp cloth when it is cooled down.
- Wash all accessories in hot soapy water or in a dishwasher, wipe dry with a paper or cloth towel.
- If you use your oven for an extended period of time, condensation may form. Dry it using a soft cloth.
- There is a rubber seal surrounding the oven opening which guarantees its perfect functioning. Check the condition of this seal on a regular basis. If necessary, clean it and avoid using abrasive products or objects to do so. Should it become damaged, please contact Caple service. We recommend you avoid using the oven until it has been repaired.
- Never line the oven bottom with aluminium foil, as the consequent accumulation of heat could compromise the cooking and even damage the enamel.
- Clean the glass door using damp cloth and dry it with a soft cloth.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Please keep this instruction manual for future reference

Instruction manual C2220 21



 
## Replacing the lamp in the oven

- Cut off the supply of power to the oven by turning off the omni-polar switch connecting it to the mains, or by removing the plug if it is accessible.
- Unscrew the glass cover attached to the lamp holder
- Unscrew the lamp and replace it with another high-temperature lamp (300°C) with the following characteristics:

Voltage: AC220V-240V

Wattage: 15W

Socket: E 14

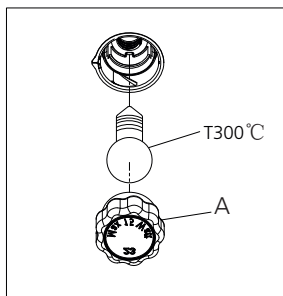

- Remount the glass cover and reconnect the appliance to the power supply.

## WARNING:

Ensure the appliance is unplugged before replacing the lamp to avoid the possibility of an electric shock.

Please keep this instruction manual for future reference





## TROUBLESHOOTING

|  |  |
|--|--|
| The oven does not operate                                | Check it is switched on at the mains<br>There has been a power cut<br>The time is not set      |
| The oven is not heating                                  | The thermostat is not turned to a temperature  |
| The interior lamp does not illuminate                    | Check the product is connected to the electrical supply and is switched on<br>Replace the bulb |
| Lower and upper parts of the oven are not cooking evenly | Control the shelf location, cooking period and temperatures according to the manual            |

## USEFUL NOTES FOR COOKING





In the following table, some indicative hints for cooking:

| Faults   | Causes                          | Remedies   |
|--|---------------------------------|--|
| The upper crust is dark and the lower part too pale        | Not enough heat from the bottom | <ul style="list-style-type: none"><li>- Use the natural convection position</li><li>- Use deeper cake tins</li><li>- Lower the temperature</li><li>- Put the cake on a lower shelf</li></ul> |
| The lower part is dark and the upper crust too pale        | Excessive heat from the bottom  | <ul style="list-style-type: none"><li>- Use the natural convection position</li><li>- Use lower side tins</li><li>- Lower the temperature</li><li>- Put the cake on a higher shelf</li></ul> |
| The outside is too cooked and the inside not cooked enough | Too high temperature            | Lower the temperature and increase the cooking time  |
| The outside is too dry even though it is the right color   | Too low temperature             | Increase the temperature and reduce the cooking time.  |

Please keep this instruction manual for future reference



## REMOVING AND REVERSING THE OVEN DOOR
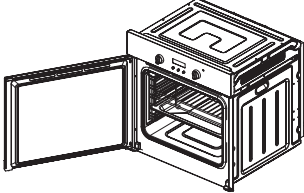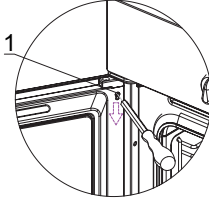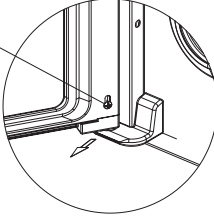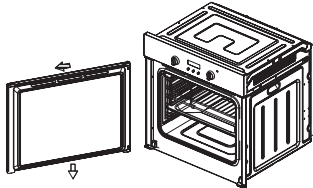
| Procedure | Description  | Image   |
|-----------|--|---|
| 1         | Open the door  |    |
| 2         | Undo screw(1) with a screwdriver. Push the screw(1) down the elongated screw hole to lower the fixing pin and release the door, and then pull the door out from the upper hinge. |    |
| 3         | Lift the door out from the lower hinge.  |   |
| 4         | The door is then completely removed.   |  |

Please keep this instruction manual for future reference







|   |  |  |
|---|--|--|
| 5 | <p>Push screw 1 back up the elongated hole to raise the fixing pin, and tighten the screw to secure it into place. Unscrew screw 2 and move it down the elongated hole to lower the fixing pin.</p>                        |  |
| 6 | <p>The door is now ready to reverse and re-attach to the oven.<br/>Once reversed, screw 1 will now be in the lower position, and screw 2 in the upper.</p>   |  |
| 7 | <p>Insert the lower fixing pin(5) into the lower hinge support(6).</p>   |  |
| 8 | <p>Align the upper fixing pin with the upper hinge support(4), and then move the screw(2) up the elongated hole to raise the fixing pin into the hinge support. Now tighten the screw(2) to secure this into position.</p> |  |
| 9 | <p>The door reversal is now complete.</p>  |  |

Please keep this instruction manual for future reference





## Technical Fiche

|   |          |
|---|----------|
| <b>Caple</b>                                  |          |
| Model   | C2220    |
| Type of Oven                                  | Electric |
| Mass  | 35.3Kg   |
| Energy Efficiency Index-Conventional          | n/a      |
| Energy Efficiency Index-Fan forced            | 86.8     |
| Energy Class                                  | A        |
| Energy Consumption (electricity)-conventional | n/a      |
| Energy consumption (electricity)-fan forced   | 0.72     |
| Number of cavities                            | 1        |
| Heat Source                                   | Electric |
| Volume  | 67       |
| This Oven complies with EN 60350-1:2013+A11   |          |

Please keep this instruction manual for future reference





## NOTES

Please keep this instruction manual for future reference

Instruction manual C2220 27





Caple Service  
Fourth Way  
Avonmouth  
Bristol  
BS11 8DW

t: 0117 938 7420  
e: [service@caple.co.uk](mailto:service@caple.co.uk)  
[www.caple.co.uk](http://www.caple.co.uk)

Please keep this instruction manual for future reference

