

FOLLOW US



Thank you for your valued support and please help us spread the word through social media with images and comments, once your product has been installed.

www.bidburyandco.com

   /bidburyandco

Team Bidbury
EXCLUSIVE

REGISTER TODAY TO RECEIVE YOUR FREE EXTENDED WARRANTY

IT'S AS EASY AS 1,2,3!

www.bidburyandco.com/team-bidbury

Bidbury & Co

MALVERN SPA



INSTALLATION INSTRUCTIONS

INTRODUCTION




PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.

This guide contains general installation instructions on how to install your product. However, it is important that the item is installed by a qualified and experienced professional. Therefore reliance on these instructions will be minimal.

Care taken during the installation will ensure long life and trouble free operations from the tap.

It is extremely important that all pipe work is flushed thoroughly after installation to avoid damaging the ceramic disc. It is recommended that the cold valve/handle on the tap are opened fully before you turn the water supply back on. This will ensure no debris will get lodged in the disc, causing possible damage.

SPARE PARTS LIST

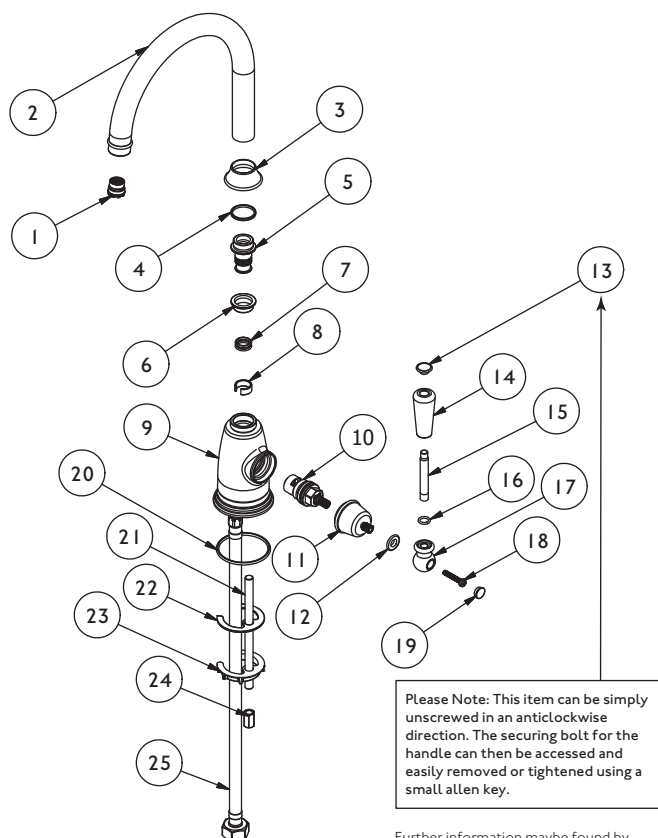

Further information maybe found by visiting: www.bidburyandco.com/blog

The set comprises of the following:

ITEM	QTY	DESCRIPTION
1	1	Aerator
2	1	Spout
3	1	Spout Cover
4	1	Spout Bushing
5	1	Connector
6	1	Connector Bushing
7	2	O-Ring
8	1	Connector Ring
9	1	Basin Monobloc
10	1	Ceramic Valve
11	1	Valve Cover
12	1	Handle Ring
13	1	Lever Nut
14	1	Lever Handle
15	1	Handle Stem
16	1	O-Ring
17	1	Handle
18	1	Screw
19	1	Indicie
20	1	O-Ring
21	1	Fixing Rod
22	1	Washer
23	1	Horseshoe Plate
24	1	Nut
25	1	400mm Flexible Tailpipe (G ³ / ₄ " Connection)

Check that all parts are present.

INSTALLATION



Ideally you will have flat faced isolation valves fitted to your supply pipework. If so close both the hot and cold isolation valves and open the tap levers to release any trapped water/pressure. You can now disconnect the old tap. If you do not have isolating valves fitted to the existing tap, you will then need to shut off the main water supply by following the next step.

First shut off any stop cock on your hot water system then, with your mains cold water stop cock also closed, open the lowest hot and cold taps in the house and allow to run until both hot and cold pipes are empty (the hot water storage cylinder always remains full but cannot empty due to being shut off).


Fitting flat faced isolating valves to the inlet feeds is recommended for ease of maintenance.

REMEMBER TO TURN OFF THE MAINS WATER SUPPLY BEFORE CONNECTING TO ANY EXISTING PIPE WORK.

- Identify all components before fitting;
- Flexible tailpipe should NOT be over tightened as this can cause damage to the rubber seals
- Use the rubber seal and horseshoe plate provided to install the filter tap onto the basin or worktop surface
- Connect cold water supply
- Check for joint and connection leaks, turn on the water supply and open the tap valve fully letting the water flow for a few minutes.
- Resolve if required.

ENSURE YOU HAVE THE CORRECT PRESSURE BEFORE FITTING:

- Recommended operating pressure 2.0-2.5 Bar
- Maximum operating pressure 3.0 Bar

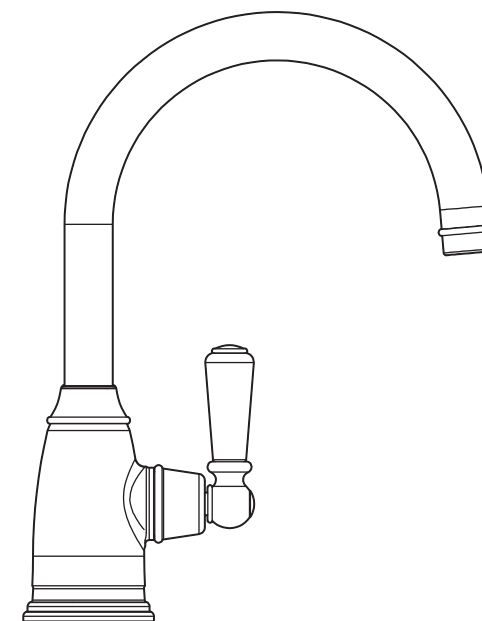

REGULAR DAILY CLEANING



The surface finish we use on our taps is very durable and hard wearing. However, care should still be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to a strong cleaning agents and therefore substances such as household cleaners, disinfectants, denture cleaners, hair dyes can cause damage to the surface and should be avoided.

For more detailed information on taking care of your Bidbury tap visit: www.bidburyandco.com/care-instructions/

FOLLOW US



Thank you for your valued support and please help us spread the word through social media with images and comments, once your product has been installed.

www.bidburyandco.com

   /bidburyandco

Team Bidbury
EXCLUSIVE

REGISTER TODAY TO RECEIVE YOUR FREE EXTENDED WARRANTY

IT'S AS EASY AS 1,2,3!

www.bidburyandco.com/team-bidbury

Bidbury & Co

MALVERN SPA



INSTALLATION INSTRUCTIONS

INTRODUCTION


PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.

This guide contains general installation instructions on how to install your product. However, it is important that the item is installed by a qualified and experienced professional. Therefore reliance on these instructions will be minimal.

Care taken during the installation will ensure long life and trouble free operations from the tap.

It is extremely important that all pipe work is flushed thoroughly after installation to avoid damaging the ceramic disc. It is recommended that the cold valve/handle on the tap are opened fully before you turn the water supply back on. This will ensure no debris will get lodged in the disc, causing possible damage.

SPARE PARTS LIST

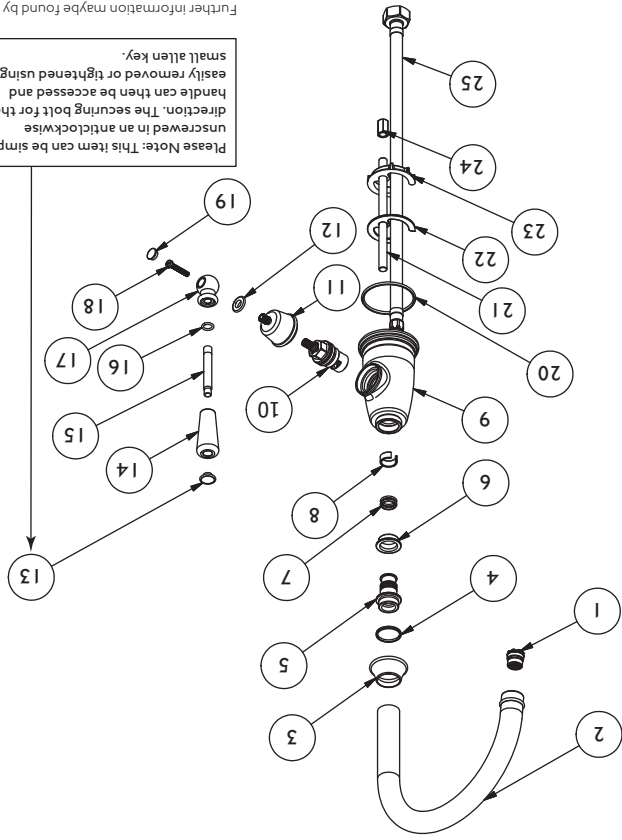

Further information may be found by visiting: www.bidburyandco.com/blog

ITEM	QTY	DESCRIPTION
1	1	Aerator
2	1	Spout
3	1	Spout Cover
4	1	Spout Bushing
5	1	Connector
6	1	Connector Bushing
7	2	O-Ring
8	1	Connector Ring
9	1	Basin Monobloc
10	1	Ceramic Valve
11	1	Valve Cover
12	1	Handle Ring
13	1	Lever Nut
14	1	Lever Handle
15	1	Handle Stem
16	1	O-Ring
17	1	Handle
18	1	Screw
19	1	Indicle
20	1	O-Ring
21	1	Fixing Rod
22	1	Washer
23	1	Horseshoe Plate
24	1	Nut
25	1	400mm Flexible Tailpipe (G3/4" Connection)

The set comprises of the following:

Check that all parts are present.

INSTALLATION

Ideally you will have flat faced isolation valves fitted to your supply pipework. If so close both the hot and cold isolation valves and open the tap levers to release any trapped water/pressure. You can now disconnect the old tap. If you do not have isolating valves fitted to the existing tap, you will then need to shut off the main water supply by following the next step.

First shut off any stop cock on your hot water system then, with your mains cold water stop cock also closed, open the lowest hot and cold taps in the house and allow to run until both hot and cold pipes are empty (the hot water storage cylinder always remains full but cannot empty due to being shut off).

Fitting flat faced isolating valves to the inlet feeds is recommended for ease of maintenance.

REMEMBER TO TURN OFF THE MAINS WATER SUPPLY BEFORE CONNECTING TO ANY EXISTING PIPE WORK.

Identify all components before fitting:

- Flexible tailpipe should NOT be over tightened as this can cause damage to the rubber seals
- Use the rubber seal and horseshoe plate provided to install the filter tap onto the basin or worktop surface
- Connect cold water supply
- Check for joint and connection leaks, turn on the water supply and open the tap valve fully letting the water flow for a few minutes.
- Resolve if required.

ENSURE YOU HAVE THE CORRECT PRESSURE BEFORE FITTING:

- Recommended operating pressure 2.0-2.5 Bar
- Maximum operating pressure 3.0 Bar

REGULAR DAILY CLEANING

The surface finish we use on our taps is very durable and hard wearing. However, care should still be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to a strong cleaning agents and therefore substances such as household cleaners, disinfectants, denture cleaners, hair dyes can cause damage to the surface and should be avoided.

For more detailed information on taking care of your Bidbury tap visit: www.bidburyandco.com/care-instructions/