


INSTALLATION GUIDE

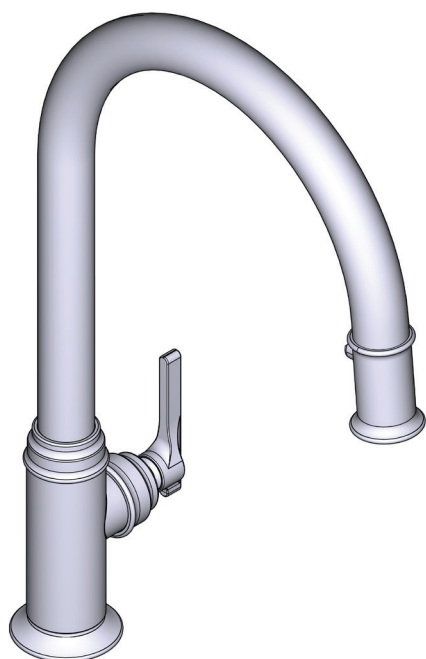

Southbank™ Single Lever Mixer with Pull Down Rinse 4944

HELPFUL TOOLS

For safety and ease of installation, the use of these helpful tools is recommended.



Safety Glasses



Adjustable Pliers



Screwdriver



Adjustable Wrench

For care and cleaning, product warranty, and additional information contact:

US Customers

U.S.A.
houseofrohl.com/support
1-800-777-9762

Canadian Customers

QUEBEC / MARITIMES / WESTERN CANADA
QUÉBEC / MARITIMES / OUEST CANADIEN
QUEBEC / MARITIMOS / CANADA OCCIDENTAL
houseofrohl.ca/support
1-866-473-8442

ONTARIO

houseofrohl.ca/support
1-800-287-5354

EMEAA Customers

www.houseofrohl.design
+44 (0) 1708 526 361

Riobel

PERRIN & ROWE®
L O N D O N




victoria ⊕ albert®

ROHL

Parts List

- A. Tap
- B. Base ring
- C. Base O Ring
- D. Clamp Plate
- E. Standard Nut
- F. Locking Nut
- G. Tap Supply Lines (Red = Hot, Blue = Cold)
- H. Pulldown hose
- I. Hose weight
- J. Outlet Hose
- K. Installation tool
- L. NRV x2

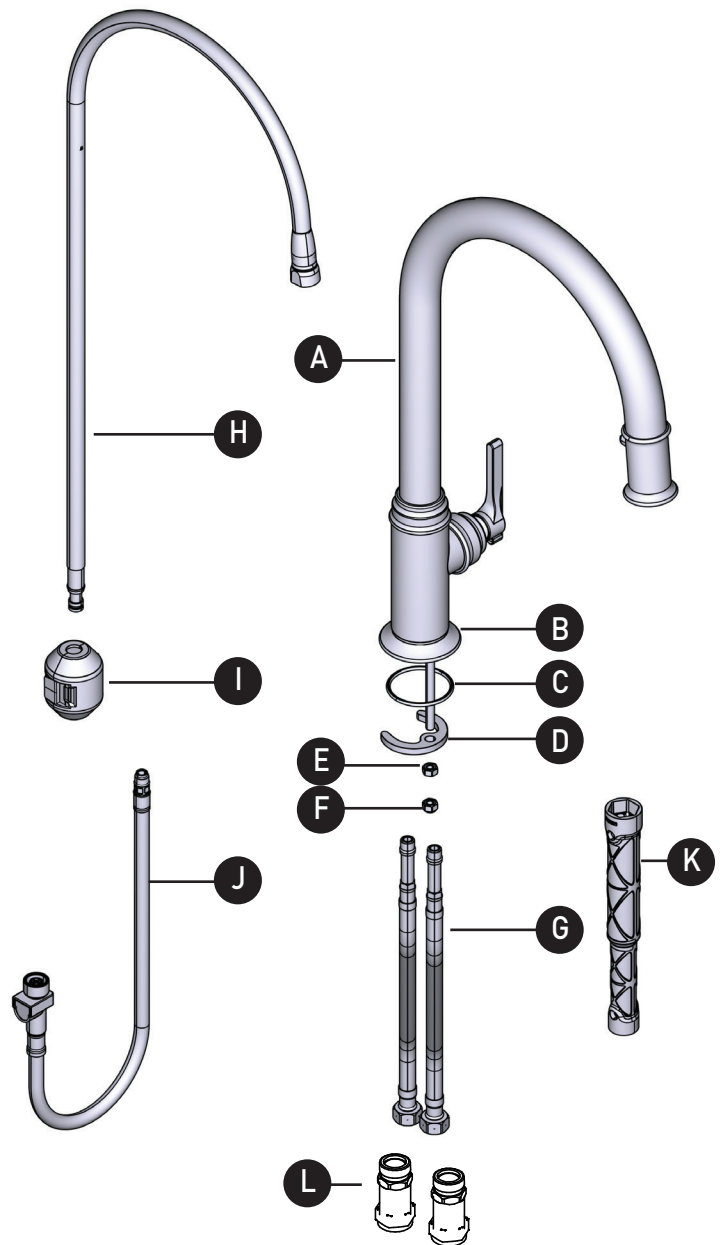

Icon Legend




Warning




CAUTION — TIPS FOR REMOVAL OF OLD TAP:


Always turn water supply OFF before removing existing tap or disassembling the valve. Open tap handle to relieve water pressure and ensure that complete water shut-off has been accomplished.

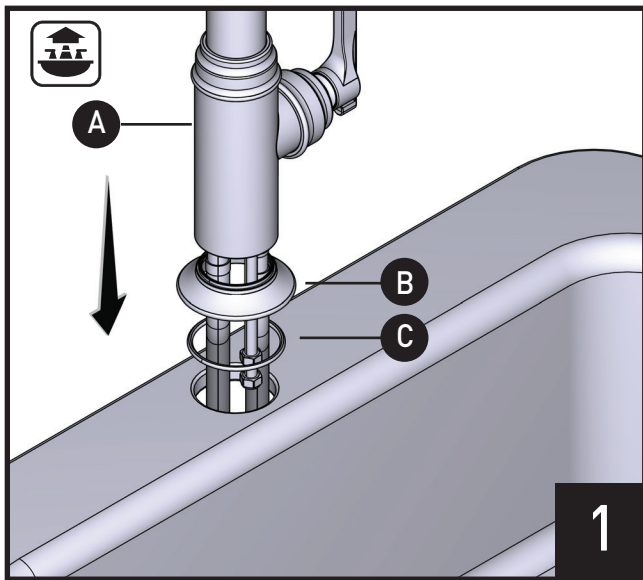


Place the Base Ring **(B)** and Base O Ring **(C)** on top of the sink and insert the Tap **(A)**.

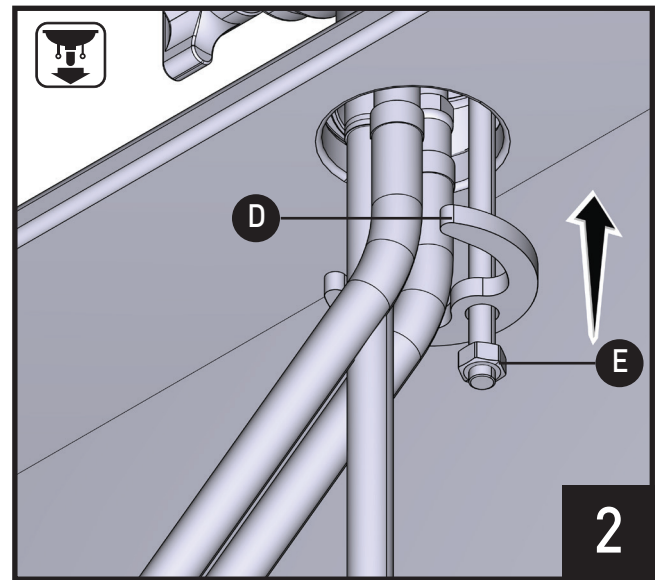


Slide Clamp Plate **(D)** up onto tap body under sink and secure with Standard Nut **(E)**.

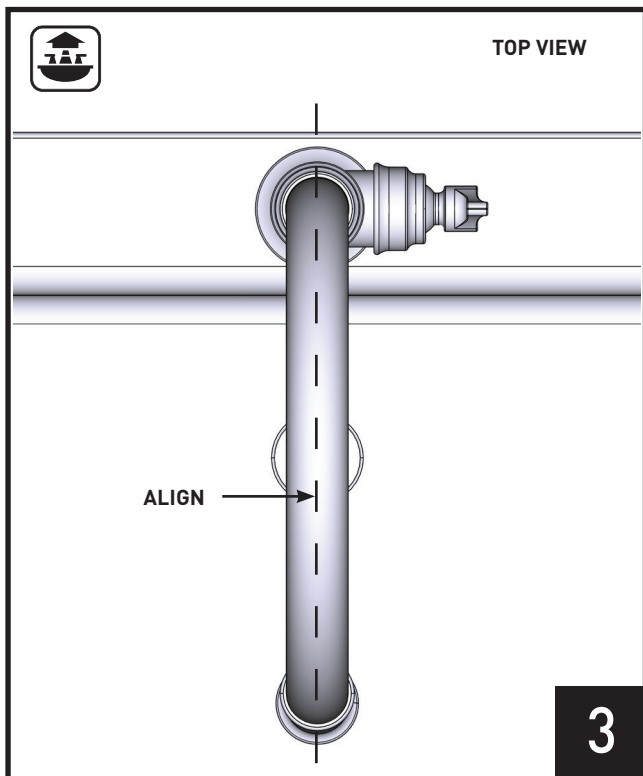


Check overall tap alignment from the top view.

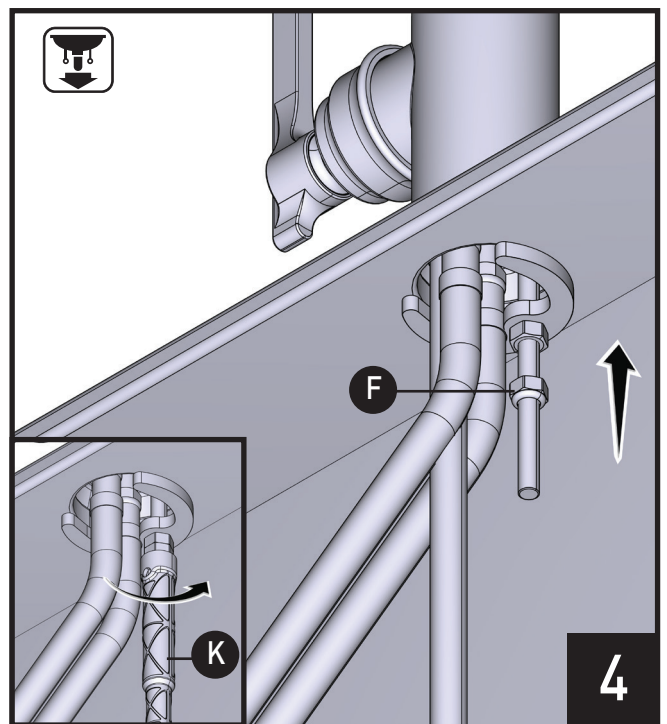


Install the Locking Nut **(F)** and tighten using the Installation Tool **(K)**.

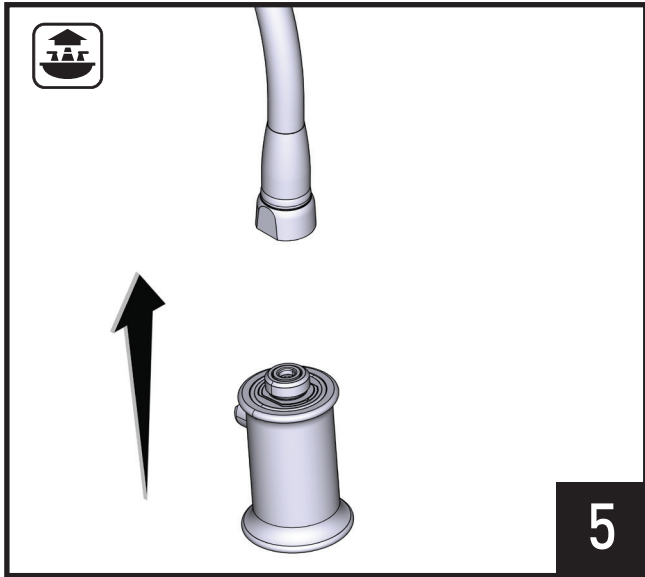


Install wand to upper connection of pulldown hose **(H)**.

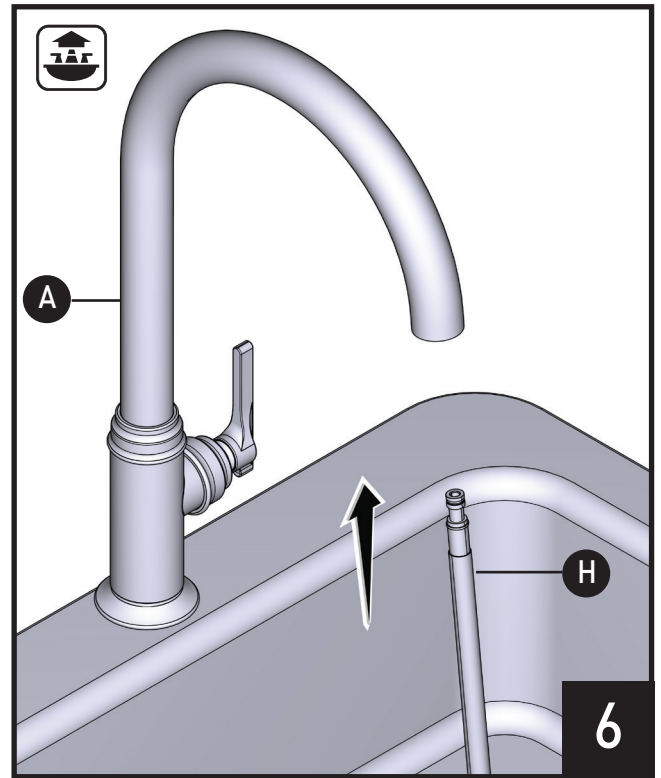


Insert small end of Pulldown Hose **(H)** into spout and feed through Tap **(A)**.

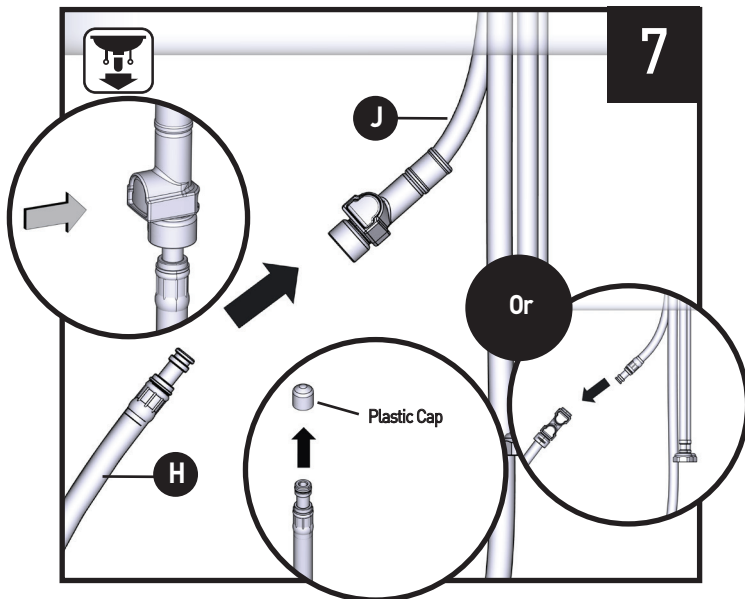


Remove and discard the plastic cap from the end of the Pullout Hose **(H)**. Install the pullout hose to the Outlet Hose **(J)**. Push the hoses gently together until a "click" is heard. Tug downward to test engagement. NOTE: To release the hose connection, press the outlet hose switch and pull the pullout hose gently.

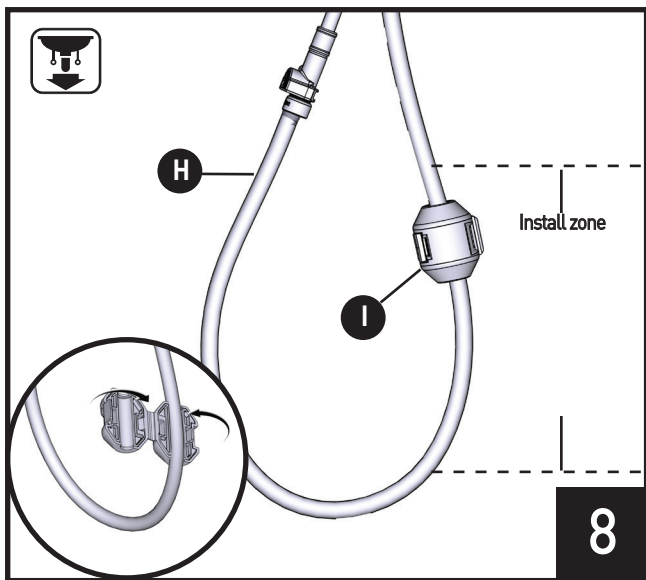


Install Hose Weight (**M**) between the bottom of the hose curvature and white tape of Pullout Hose (**I**). See above for recommended install zone locations.

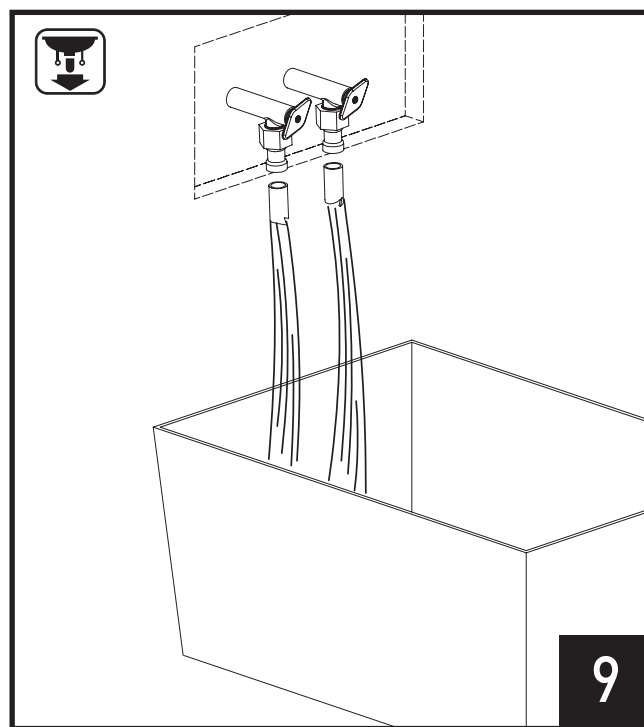

Run hot and cold water for 5 seconds.


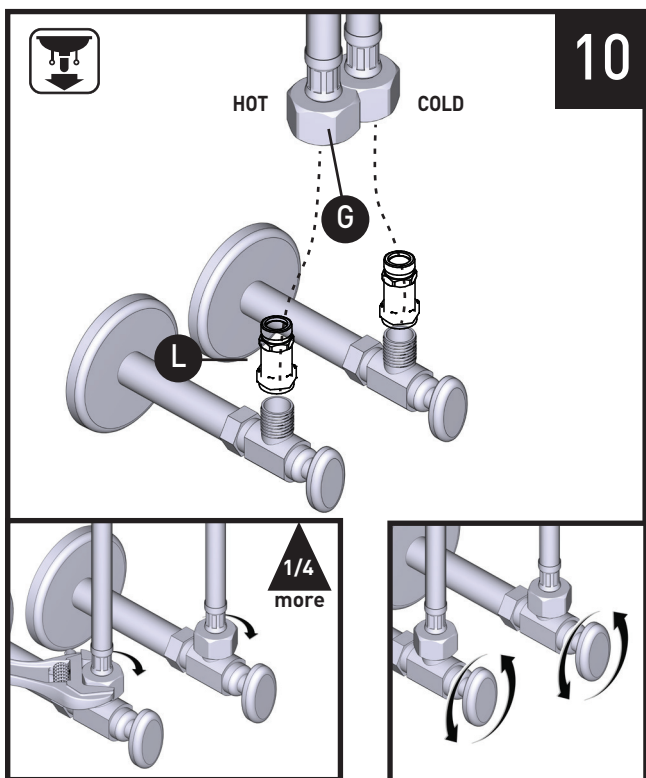


Attach tap supply lines (**G**) to NRV (**L**) onto shut off valves. Tighten by hand, then 1/4 turn more with adjustable wrench. Turn on water and check for leaks.

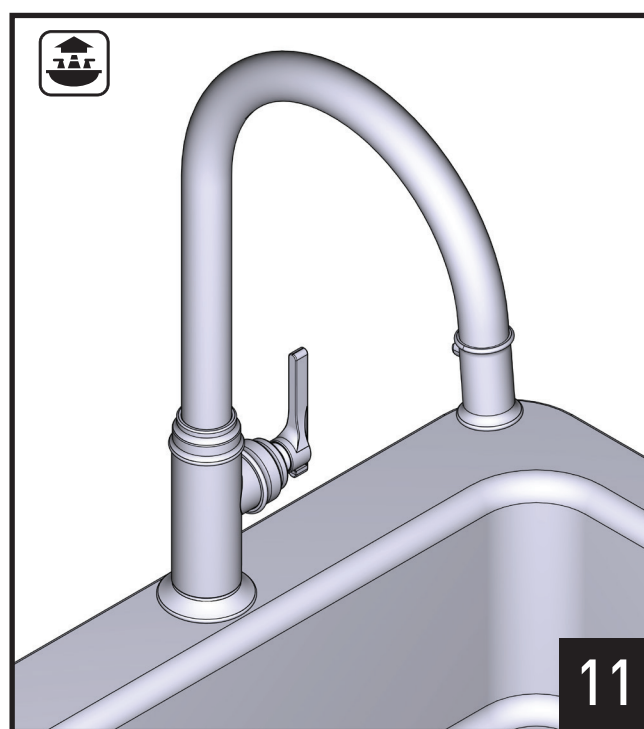

Installation is complete.

Operation

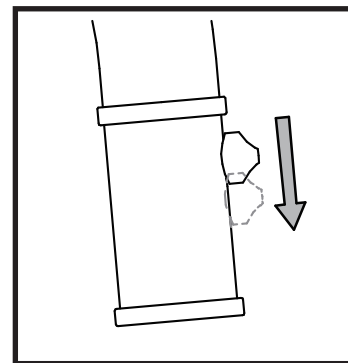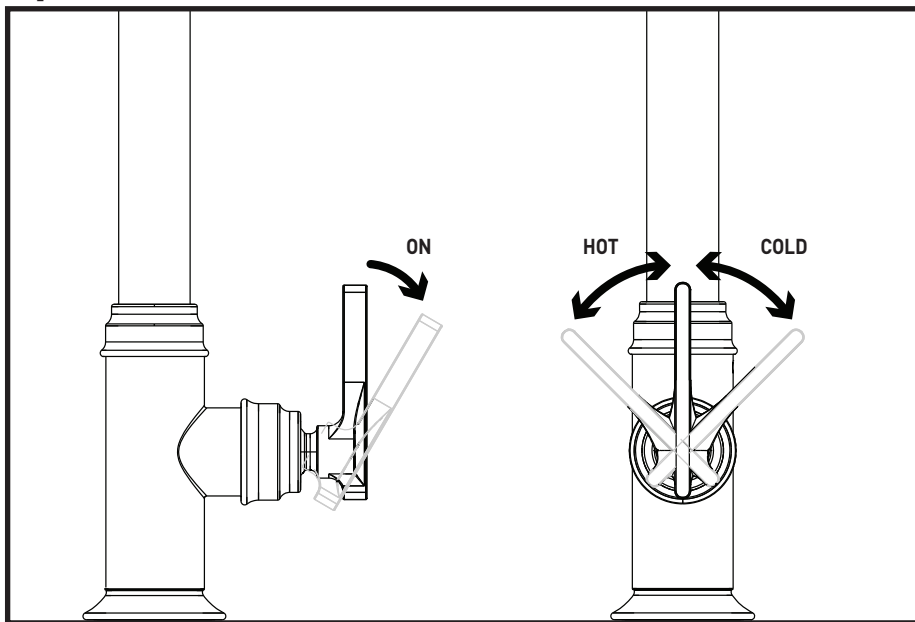

To change the flow of water from the inner jet to the outer spray, with the water running slide the button downwards. The spray will return to the inner jet after turning the tap off.

Care and maintenance:

Wipe down after use to avoid water spotting and mineral build up. Occasional cleaning with warm soapy water, followed by a polish with a soft cloth is all that is required to keep the plated finish in good condition.

Do not use proprietary abrasive liquids, powders, or pads to clean your Kitchen Tap. Do not use any products with ammonia bleach or limescale remover. You will damage the plated finish and void your guarantee.

For care and cleaning, product warranty, and additional information contact:

US Customers

U.S.A.
houseofrohl.com/support
1-800-777-9762

Canadian Customers

QUEBEC / MARITIMES / WESTERN CANADA
QUÉBEC / MARITIMES / OUEST CANADIEN
QUEBEC / MARITIMOS / CANADA OCCIDENTAL
houseofrohl.ca/support
1-866-473-8442

EMEA Customers

www.houseofrohl.design
+44 (0) 1708 526 361

Riobel

PERRIN & ROWE
LONDON



victoria ⊕ albert®

ROHL