


INSTALLATION GUIDE



Southbank[™] Bridge Mixer with Pull Down Rinse 4956

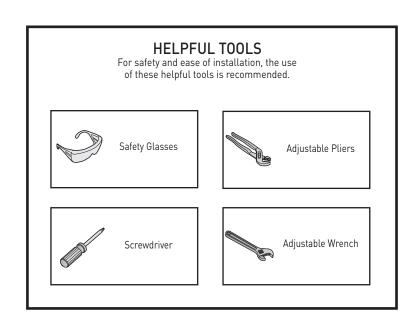

For care and cleaning, product warranty, and additional information contact:

US Customers U.S.A.

houseofrohl.com/support

1-800-777-9762

QUEBEC / MARITIMES / WESTERN CANADA QUÉBEC / MARITIMES / OUEST CANADIEN QUEBEC / MARITIMOS / CANADA OCCIDENTAL houseofrohl.ca/support 1-866-473-8442

ONTARIO houseofrohl.ca/support 1-800-287-5354

www.houseofrohl.design +44 (0) 1708 526 361

EMEAA Customers

Riobel

PERRIN & ROWE






Canadian Customers

Rohl

Parts List


- A. Tap
- B. Base O Ring
- C. Back Nut
- D. Tap Supply Lines (Red = Hot, Blue = Cold)
- E. Connector
- F. Pulldown Hose
- G. Hose Weight
- H. Outlet Hose
- I. NRV x2

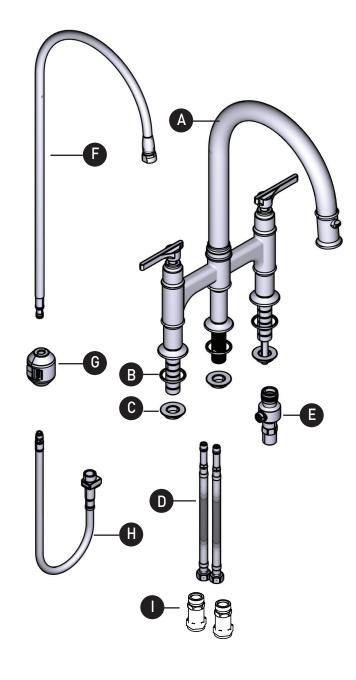







Always turn water supply OFF before removing existing tap or disassembling the valve. Open tap handle to relieve water pressure and ensure that complete water shut-off has been accomplished.

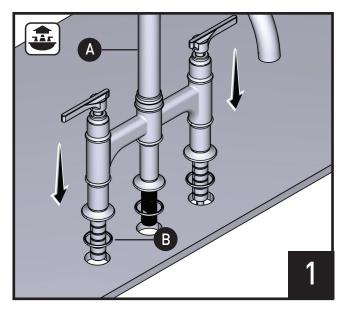


Place Base 0 Ring (B) on top of the sink and insert Tap (A).

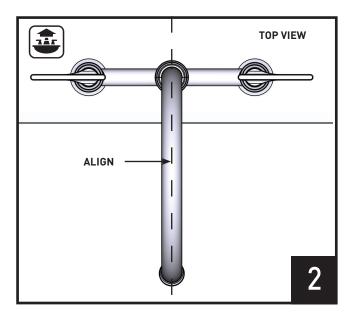


Check overall tap alignment from the top view.

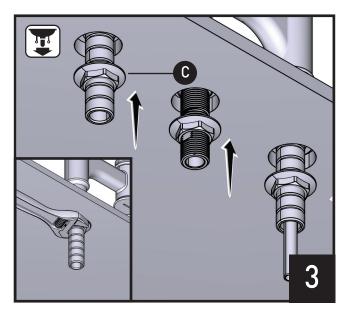


Screw Back Nut **(C)** up onto Tap shank and tighten with wrench.

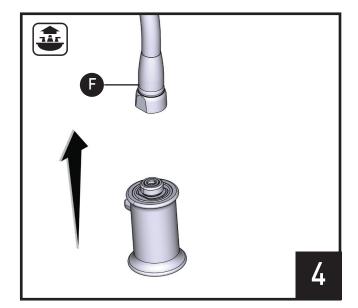


Install wand to upper connection of Pulldown Hose **(F)**.

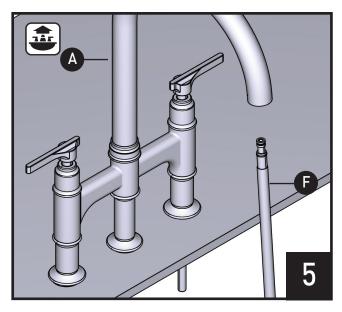


Insert small end of Pulldown Hose (F) into spout and feed through Tap (A).

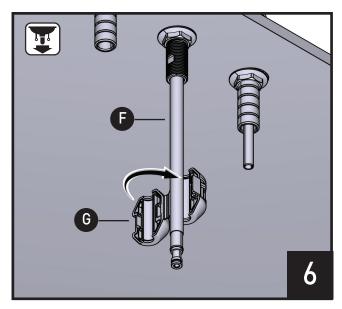


Install Hose Weight (G) onto Pulldown Hose (F).

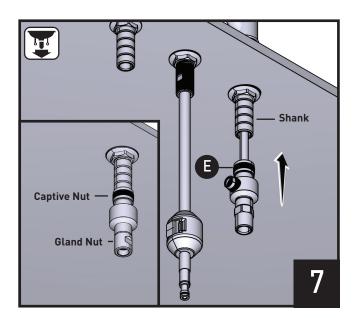


Slide Connector **(E)** onto cold side shank and fully tighten Captive Nut by hand. Then tighten bottom Gland Nut by hand.

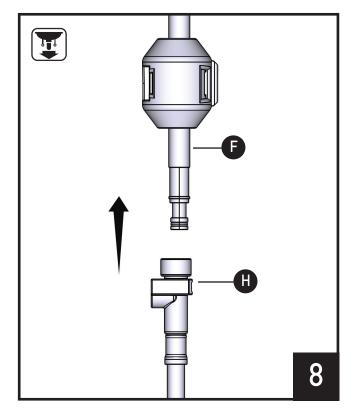


Push Pulldown Hose (F) into Outlet Hose (H).

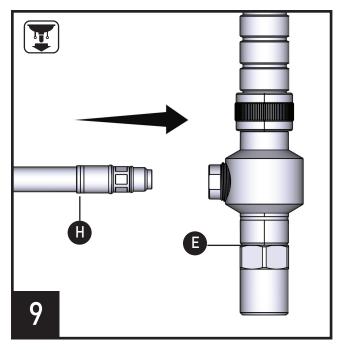


Connect Outlet Hose (H) to Connector (E).

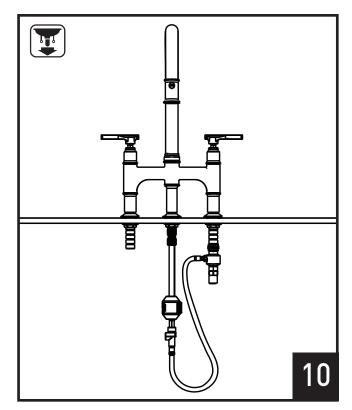


Check the view below deck. Ensure there is free movement during pull down wand use. Test that the spray head extends far enough by pulling it out.

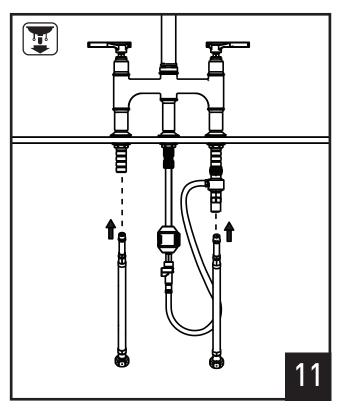

Connect Tap Supply Lines **(D)** to Tap.

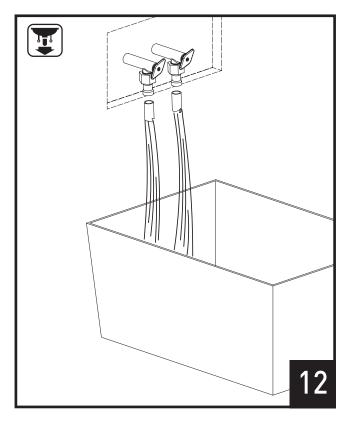

Run hot and cold water for 5 seconds.

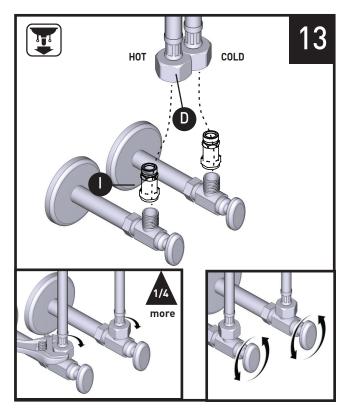



Attach tap supply lines **(D)** to NRV **(I)** onto shut off valves. Tighten by hand, then 1/4 turn more with adjustable wrench. Turn on water and check for leaks.



Installation is complete.

Operation

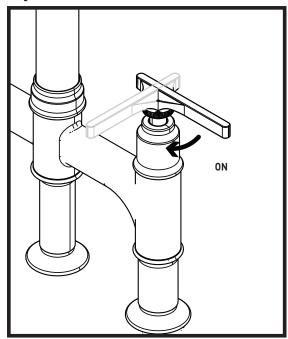

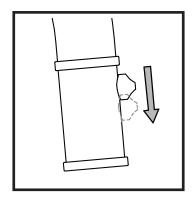

To change the flow of water from the inner jet to the outer spray, with the water running slide the button downwards. The spray will return to the inner jet after turning the tap off.

Care and maintenance:

Wipe down after use to avoid water spotting and mineral build up. Occasional cleaning with warm soapy water, followed by a polish with a soft cloth is all that is required to keep the plated finish in good condition.

Do not use proprietary abrasive liquids, powders, or pads to clean your Kitchen Tap. Do not use any products with ammonia bleach or limescale remover. You will damage the plated finish and void your guarantee.

For care and cleaning, product warranty, and additional information contact:

US Customers Canadian Customers EMEAA Customers

U.S.A. houseofrohl.com/support 1-800-777-9762 QUEBEC / MARITIMES / WESTERN CANADA QUÉBEC / MARITIMES / OUEST CANADIEN QUEBEC / MARITIMOS / CANADA OCCIDENTAL houseofrohl.ca/support 1-866-473-8442

ONTARIO houseofrohl.ca/support 1-800-287-5354 www.houseofrohl.design +44 (0) 1708 526 361

Riobel

PERRIN & ROWE*



victoria (albert ®

Rohl