


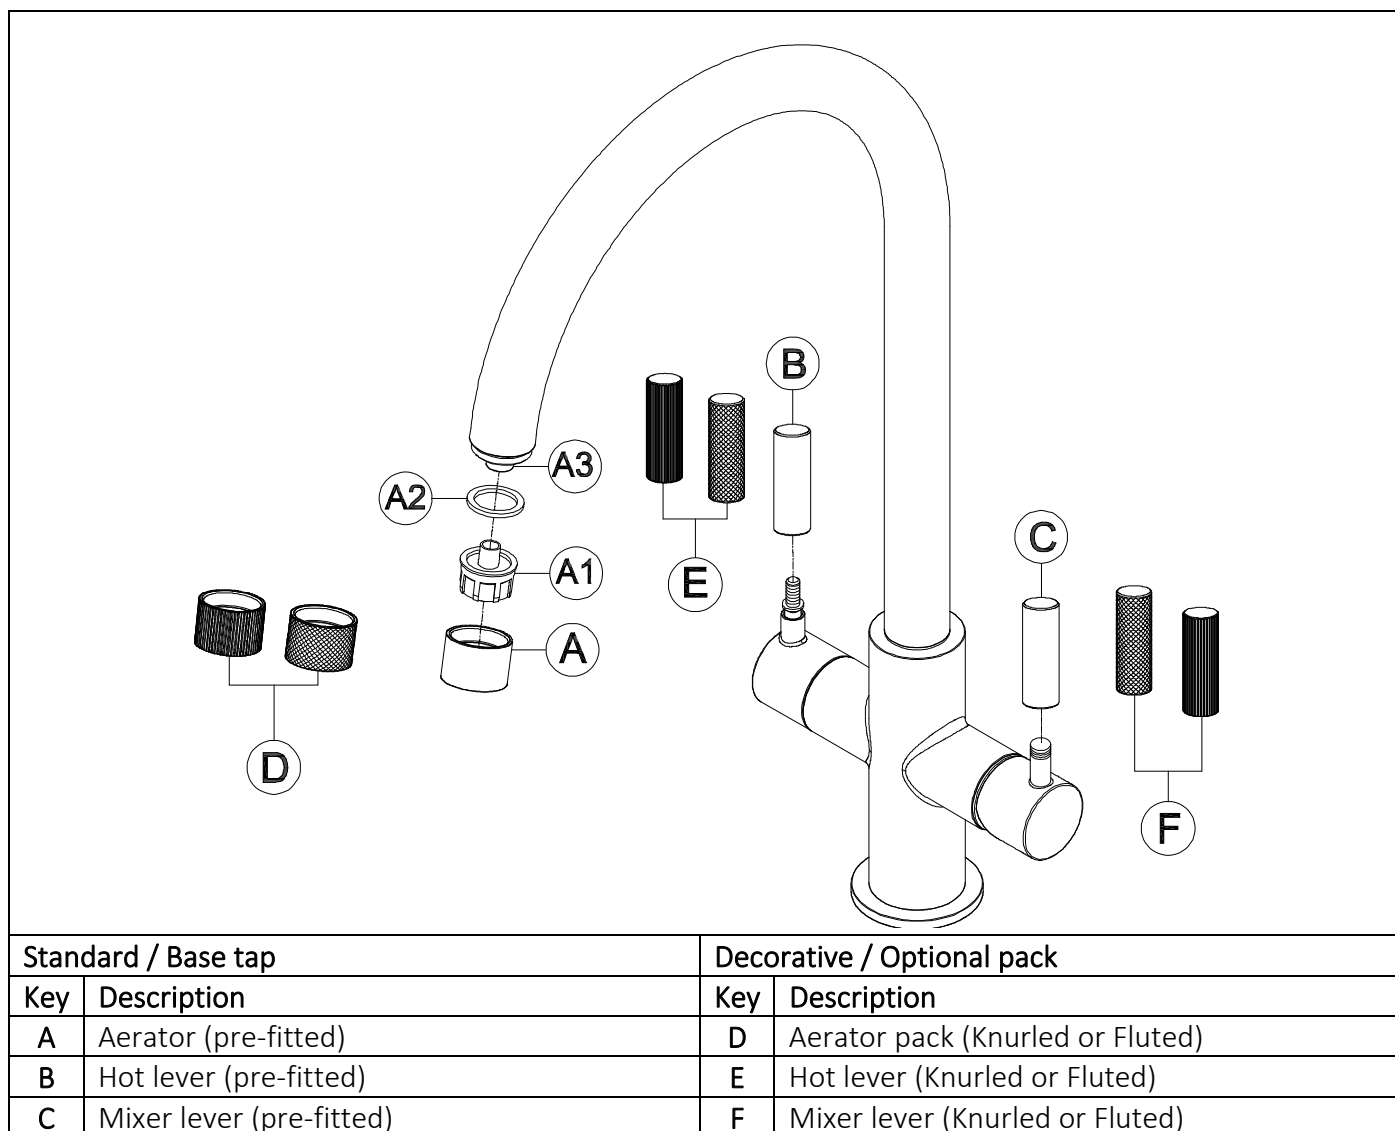

1. Unscrew aerator housing (A).

⚠ Important: You must ensure that the spout inner tube (A3) and aerator (A1) are firmly pushed together on reassembly. Should you accidentally let go of the inner spout tube then a paper clip or similar can be used to pull it outside of the spout again.

2. Place new aerator housing (D) over aerator (A1) and screw back onto the spout ensuring seal (A2) is in place.
3. Unscrew left (hot) lever (B) by hand and replace securely with new lever (E).
4. Unscrew right (mixer) lever (C) as shown and replace securely with new lever (F).